




(1)

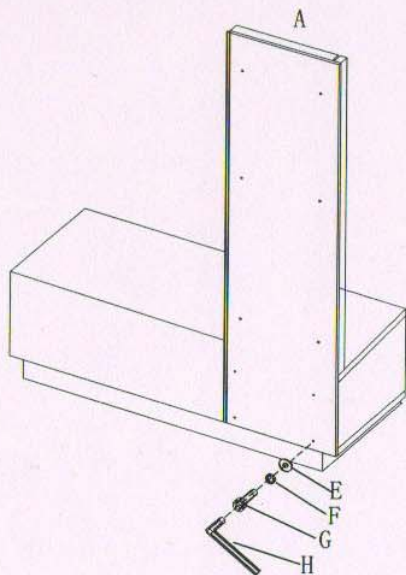

(2)

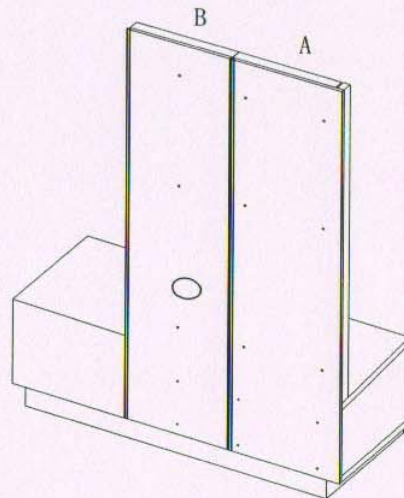

(3)

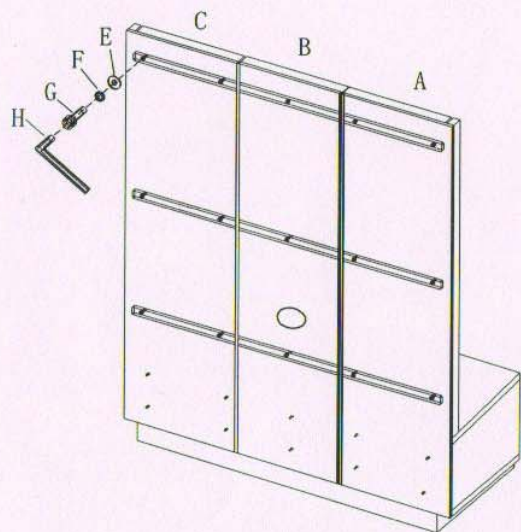

(4)



ASSEMBLY INSTRUCTION









ATTENTION: PLEASE REMOVE ALL "HARDWARE" BAG (1) / "WOOD SLATE (3) CROSS BAND" / GLASS SHELF FROM THE BOTTOM OF WALL UNIT BASE.

1. PUT THE BACKBOARD (A) ON THE BASE WITH BIG BOLT (G) WHICH INCLUDED WASHER (E) AND SPRING WASHER (F).

2. PUT THE BACKBOARD (B) ONE BY ONE ON THE BASE ACCORDING TO ARROWHEAD WITH BIG BOLT (G) WHICH INCLUDED WASHER (E) AND SPRING WASHER (D).

3. TO FIX UP THE BACKBOARD, PUT THE CROSSBAND ON THE BASE WITH BIG BOLT (G) WHICH INCLUDED WASHER (E) AND SPRING WASHER (F).

4. AS PICTURE INSTALL THE SMALL BOLT (K), THE PLASTIC WASHER (J) AND THE NUT (I) IN HOLE OF THE GLASS. THEN INSERT THE GLASS SHELF IN THE SLOT OF A&C.

PART NO.	DESCRIPTION		QUANTITY
E	WASHER		25
F	SPRING WASHER		25
G	BIG BOLT		25
H	ALLEN KEY		1
I	NUT		8
J	PLASTIC WASHER		8
K	SMALL BOLT		4
L	PLASTIC		8