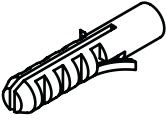



CANYON MIRROR
Item Code : CY-14-8

HARDWARE LIST


1	PLASTIC ANCHOR	1 PC	2	SCREW	1 PC
					


TOOLS REQUIRED

- PHILLIPS HEAD SCREWDRIVER (NOT PROVIDED)
- DRILLING TOOL (NOT PROVIDED)

INSTALLING MIRROR ON THE WALL

1. MARK THE WALL WITH A PENCIL.
2. MAKE A DRILL HOLE WITH A DIAMETER OF 6 MM AND 30 MM DEPTH, THEN INSERT THE PLASTIC ANCHOR IN TO THE WALL.
3. THREAD THE SCREW INTO THE PLASTIC ANCHOR WTH SCREWDRIVER AND LEAVE IT OVER 1/8 PART OF THE SCREW'S LENGTH TO HANG THE MIRROR.
4. HANG THE MIRROR ON THE WALL USING THE WIRE, WHICH IS ALREADY INSTALLED BEHIND THE MIRROR

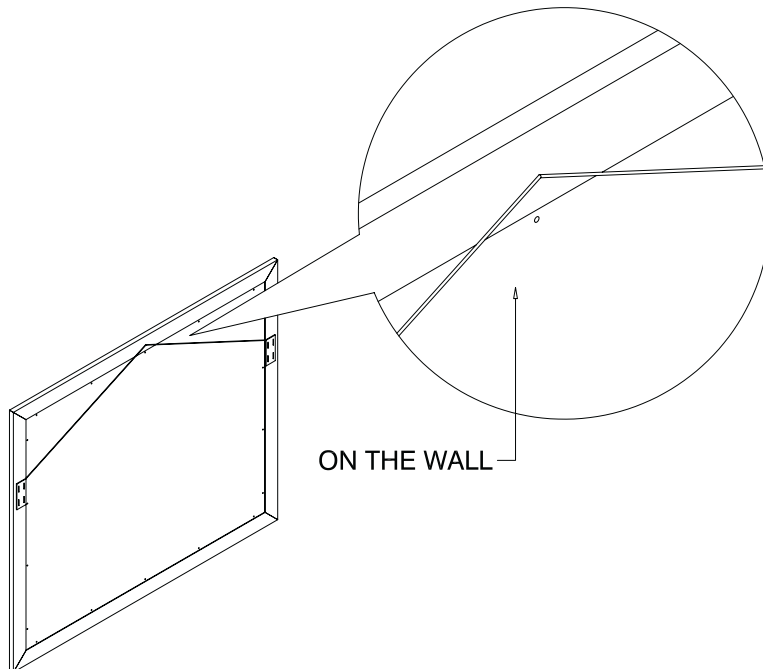

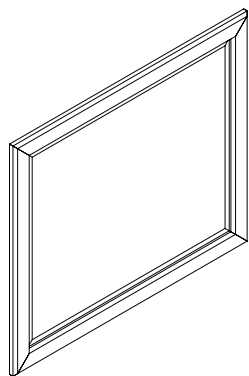

**MODUS
FURNITURE
INTERNATIONAL**

CANYON ESPEJO

Código del artículo : CY-14-8

LISTA DEL HARDWARE

1	ANCLA PLÁSTICA	1 PC	2	TORNILLO	1 PC
					

HERRAMIENTAS NECESITADAS

- DESTORNILLADOR PRINCIPAL DE PHILLIP (NO PROPORCIONADO)
- HERRAMIENTA QUE PERFORA (NO PROPORCIONADA)

INSTALACIÓN DEL ESPEJO EN LA PARED

1. MARQUE La PARED CON Un LÁPIZ.
2. HAGA Un AGUJERO De TALADRO CON Un DIÁMETRO De 6 Milímetros Y De 30 Milímetros De PROFUNDIDAD, DESPUÉS
3. INSERTE EI ANCLA PLÁSTICA ADENTRO A la PARED.
ROSQUE EL TORNILLO EN EL DESTORNILLADOR PLÁSTICO DEL ANCLA WTH Y DÉJELO SOBRE 1/8 PORCIÓN DE LA
4. LONGITUD DEL TORNILLO PARA COLGAR EL ESPEJO.
CUELGUE EL ESPEJO EN LA PARED USANDO EL ALAMBRE, QUE ESTÁ INSTALADO YA DETRÁS DEL ESPEJO

