

MILANO BENCH

MFI MODUS
FURNITURE
INTERNATIONAL


ASSEMBLY INSTRUCTIONS

COMPONENT CHECK LIST

- 1 X LEATHER ASSY
- 4 X POST

HARDWARE LIST

- 8 X WASHER
- 8 X SPRING WASHER
- 8 X ALLEN BOLTS 50 MM
- 1 X ALLEN KEY

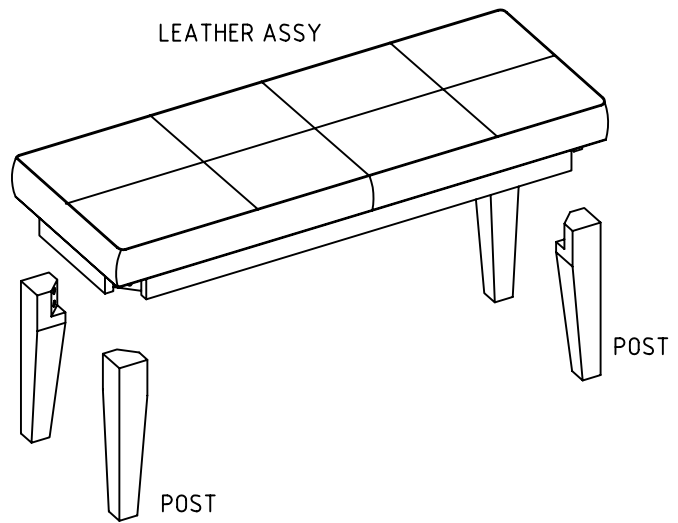

STEP

LAY DOWN LEATHER ASSY TO THE FLOOR.

ATTACH POST TO LEATHER ASSY USING WASHER, SPRING WASHER AND ALLEN BOLT 50 MM.

USE ALLEN KEY TO THREAD THE BOLTS. (ILLUSTRATION #)

