



# MONDRIAN 9 DRAWER DRESSER AND MIRROR

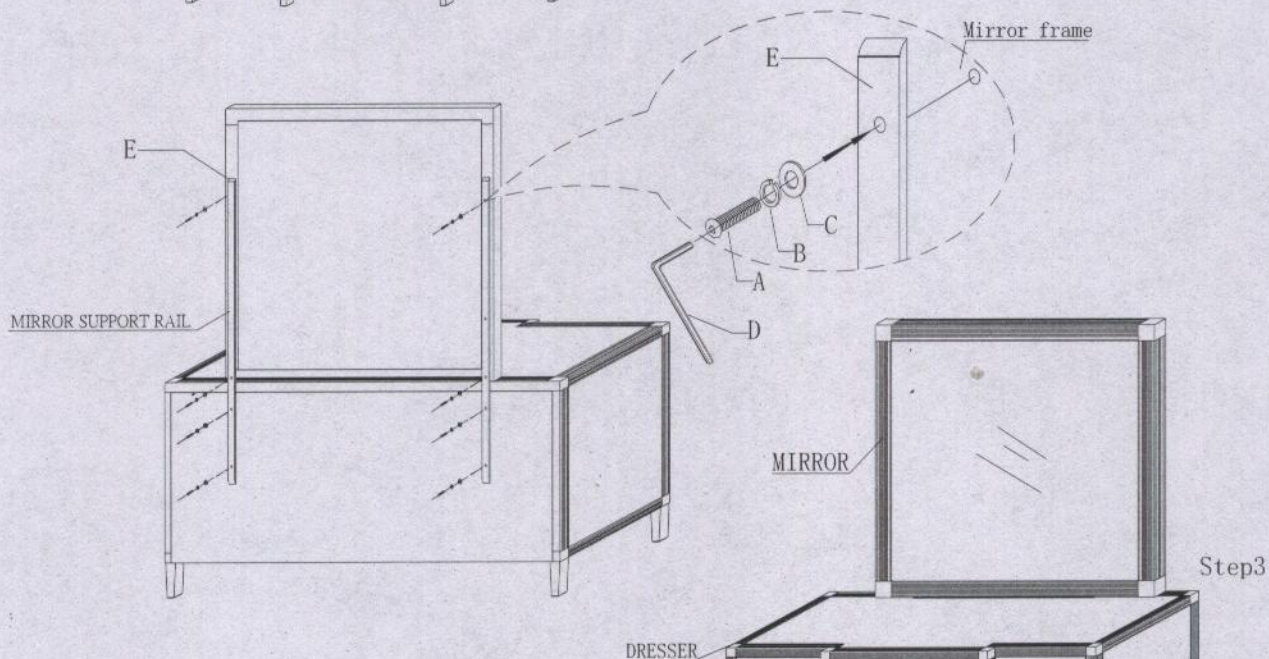
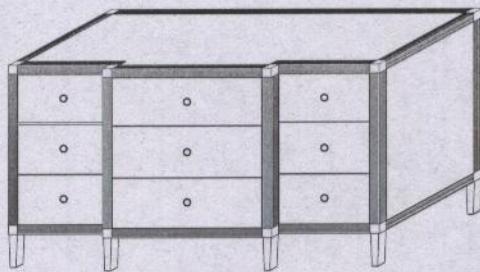
## ASSEMBLY INSTRUCTIONS






Thank you for purchasing this quality product. Be sure to check all packing materials carefully for small parts that may have come loose inside the carton during shipment.

Step 1. Turn the chest to upright position

Step 2. Attach mirror support rails to mirror frame using bolt (A) with spring washers (B), flat washers (C) by using allen wrench (D) (as shown in diagram), do not over tighten these bolts at this step.

Step 3. Place the mirror on the dresser in the desired position, fasten the mirror supports to the dresser using bolt (A) with spring washers (B), flat washers (C) by using allen wrench (D) (as shown in diagram). Please tighten bolts



HARDWARE		LIST	
A	BOLT		□5/16" * 1-1/2" 8 PCS
B	SPRING WASHER		□5/16" 8 PCS
C	FLAT WASHER		□5/16" 8 PCS
D	Allen key		5MM 1 PC
E	Mirror Support rail		1290*40*20 2 PCS

MADE IN CHINA