


MONDRIAN 9 DRAWER DRESSER AND MIRROR ASSEMBLY INSTRUCTION


Thank you for purchasing this quality product . Be sure to check all packing materials carefully for small parts that may have come loose inside the carton during shipment .

Step 1. Attach mirror support rails to mirror frame using bolt (A) with spring washers (B) flat washers (C) by using allen key (D) do not over tighten these bolts at this step .

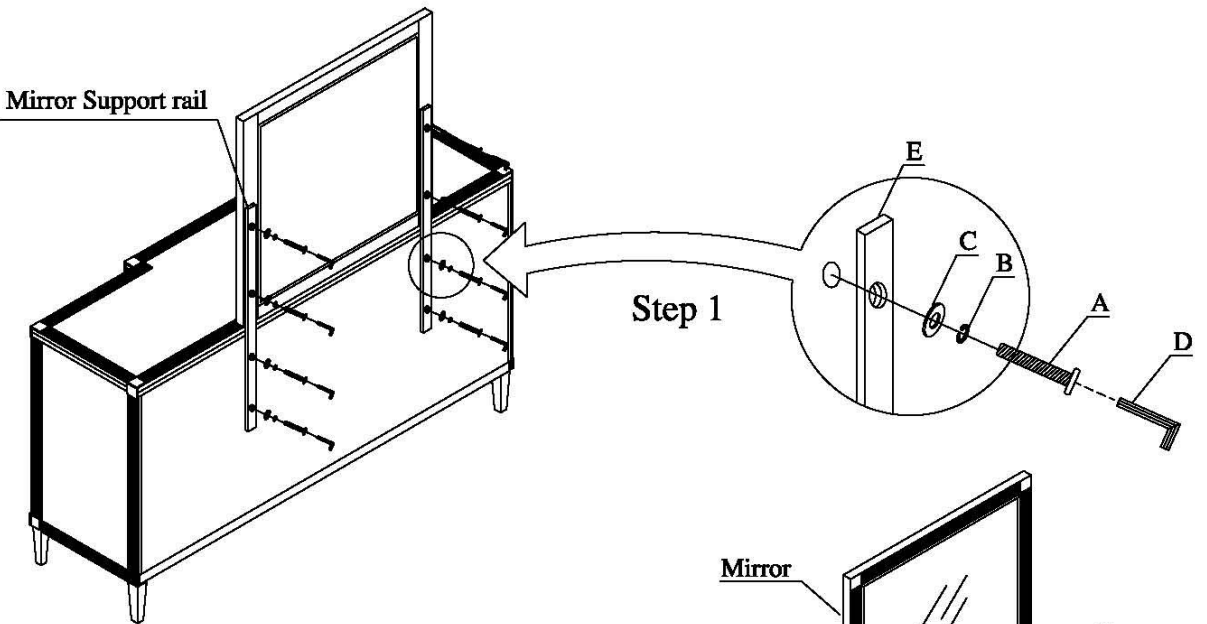




Step 2. Place the mirror on the dresser in the desired position, fasten the mirror supports to the dresser using bolt (A) with spring washers (B) flat washers (C) . please tighten all bolts .

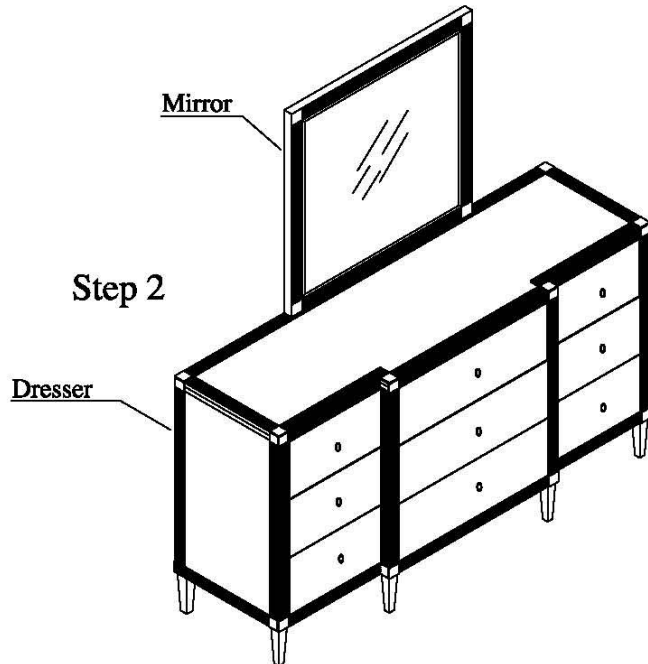

Step 1



Step 2

HARDWARE		LIST	
A	Bolt		8 PCS
B	Spring washer		8 PCS
C	Flat Washer		8 PCS
D	Allen key		1 PCS
E	Mirror support rail		2 PCS