

# MODUS TIFFANY STORAGE BED (MOTIFF)

## ASSEMBLY INSTRUCTIONS

1. Unpack all parts leaving all hardware in the bags.


**TIP: Carefully open the hardware bags and separate by type. (Figure 1)**

There are:

Qty	Description	Color
8	1 ½" Bolts	Black
16	1 ¼" Bolts	Black
3	3" Bolts	Black
24	Small Flat Washers	Black
24	Small Lock Washers	Black
8	3 ½" Threaded Dowels	Gold
8	Half-Round Spacers	Gold
8	Large Flat Washers	Gold
8	Large Lock Washers	Gold
8	Hex Nuts	Gold
8	Plastic Hole Covers	Black
1	Mattress Holder/ Retainer	Silver

Qty	Description	Color
6	1" Bolts-thicker than others	Black
6	Large Flat Washers	Black
6	Large Lock Washers	Black
6	Hex Nuts	Black
6	2" Flat Head Bolts	Silver
6	Flat Washers	Silver
6	Lock Nuts	Silver
3	Center Support Legs	Black
3	Upper Support Posts ("T")	Black
2	Corner Braces	Black

**Figure 1:**

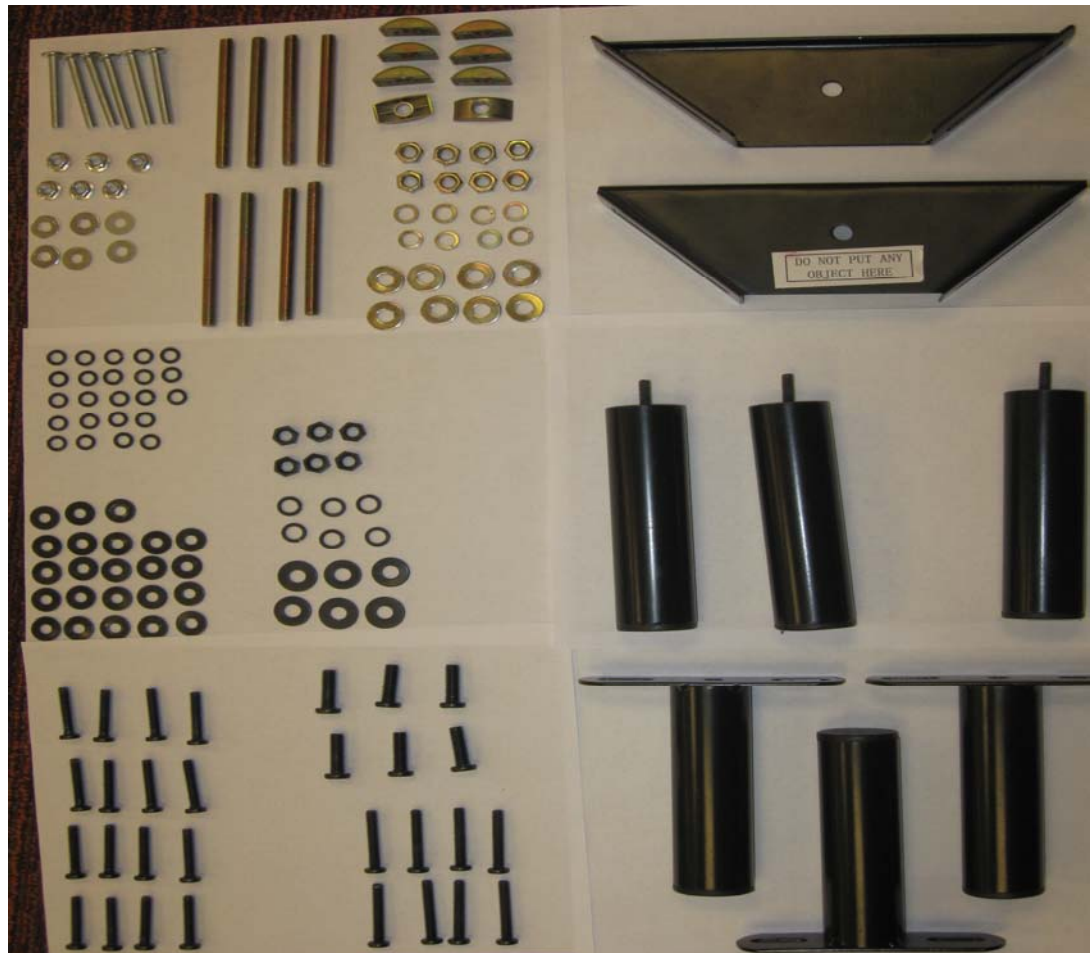

2. Locate the Center Headboard (**Figure 2**)

**Figure 2:**



3. Locate the Left and Right Headboard Sides / Wings (**Figure 3**). They are stored and shipped inside the Headboard on all King (6/6) and Queen (5/0) sets. For Full (4/6) sets, the wings will be in a separate box.

**TIP: Wings are marked with an “L” and “R” near the legs.**

**Figure 3:**



4. Lay the Left Wing on the floor, leather-side down with the straight side facing you, then turn the Center Headboard on its side and lay it on top of the Left Wing. **(Figure 4)**

**TIP: Wings are marked with an “L” and “R” near the legs.**

**Figure 4:**



5. Gently remove the back of the Center Headboard by peeling it up from the bottom. **(Figure 5)**

**Figure 5:**



6. Align the 4 holes in the Center Headboard with the 4 threaded holes in the Left Wing and attach the pieces together using:
- (4) 1 ½ " Black Bolts
  - (4) Small Black Flat Washers
  - (4) Small Black Lock Washers. (Figure 6)

**TIP: Be sure that the straight edge of the Wing is aligned with the Straight Edge of the Center Headboard before final tightening.**

Figure 6:



7. Install the Headboard Cross Member onto to the Left Wing using:
- (2) 1 ¼" Black Bolts
  - (2) Small Black Flat Washers
  - (2) Small Black Lock Washers. (Figures 7 and 8)

**TIP: Use the threaded holes towards the back of the Wings and set the smooth side of the Cross Member facing the Foot Board. The 2 threaded holes in the Cross Member MUST be on the BOTTOM.**

Figures 7 and 8:



8. Place the Right Wing on top of the Center Headboard and repeat steps 7 and 8. **(Figure 9)**

**Figure 9:**



9. Stand the completed Headboard assembly on its feet and reset the back cover by re-joining the Velcro along the sides and bottom.

**TIP: Attach the Sides first and then stretch the cover to attach along the bottom.**

10. Install (4) 3 ½ " Gold Threaded Dowels into the threaded holes in the front of the Headboard Wings. **(Figure 10)**

**NOTE:** Repeat this step for the Footboard.

**TIP: Make these hand-tight only.**

**Figure 10:**



11. Install the Right Side Side Rail onto the Footboard by sliding the holes in the rail over the Threaded Dowels in the Footboard (**Figure 11**) and attach it using: (**Figure 12**)

- (2) Gold Half-Round Spacers
- (2) Large Gold Flat Washers
- (2) Large Gold Lock Washers
- (2) Gold Hex Nuts.
- (2) Black Bolt Hole Covers (Place into the large holes in the side rails after tightened)

**NOTE:** Repeat this step to attach the Left Side Side Rail.

**TIP: The Side Rails are marked “L” and “R”**

12. Slide the completed Footboard and Side Rail Assembly over the Threaded Dowels in the Headboard and attach using:

- (4) Half-Round Gold Spacers
- (4) Large Gold Flat Washers
- (4) Large Gold Lock Washers
- (4) Gold Hex Nuts. (**Figures 11 and 12**)
- (4) Black Bolt Hole Covers (Place into the large holes in the side rails after tightened)

**TIP:** Double check that all 4 nuts are tight

**Figure 11:**



**Figure 12:**



13. Install the (3) Center Support Legs into the threaded holes on the underside of the Center Support Beam. (**Figures 13 and 14**)

**Figure 13:**



**Figure 14:**



14. Attach the Center Support Beam to the Headboard Cross Member using:

- (2) 1 ¼ " Black Bolts
- (2) Small Black Flat Washers
- (2) Small Black Lock Washers. (Figure 15)

**NOTE:** Repeat to attach to the Footboard.

**TIP:** Place the end of Center Support Beam that has the leg closest to it at the FOOT of the bed.

Figure 15:



15. Attach the (3) Upper Support Posts to the Center Support Beam directly above the Center Support Legs using:

- (2) 1" Black Bolts
- (2) Large Flat Washers
- (2) Large Lock Washers
- (2) Large Black Hex Nuts on each post. (Figure 16)

**TIP:** The bolts must be placed so that the Head is on top and the nuts and washers are underneath

Figure 16:



16. Install the 2 Black Deck Panels as Shown (Figure 17)

Figure 17:



17. Install the 2 Corner Braces between the Footboard and Side Rails using:

- (4) 1 ¼ " Black Bolts
- (4) Small Flat Washers
- (4) Small Lock Washers for each brace. (Figure 18)

**TIP: Hand tighten all of the bolts, then tighten completely**

Figure 18:



18. Open the Slat System “Rib Cage” (**Figure 19**) and place it on top of the lift supports on the Side Rails making sure that then slats are bent upwards and the leather straps / handles are at the foot of the assembly.

Attach the Rib Cage to the Lift Supports using:

- (3) 2” Silver Flat Head Bolts
- (3) Silver Flat Washers
- (3) Silver Lock Nuts on each side.

**TIP: Start with the bolt holes that are closest to the Headboard. These holes are round and using them first will set the Rib Cage in the correct position.**

**Figure 19:**



19. Install the (3) 3 “ Black Bolts, (3) Flat Black Washers, (3) Black Lock Washers, and (3) Black Nuts though the three (3) slotted holes in the middle of the rib cage. (**Figure 20**)

**Figure 20:**



20. Install the Mattress Retainer Bar in the 2 holes at the head of the Rib Cage.

21. Cut and remove the rope / twine / wire holding the Lift Supports in the “down” position.

**CAUTION:** Make sure that a partner is holding the Rib Cage down.  
The Rib Cage will rise as soon as the rope / twine is cut.

