

CAPRI BED

E. KING AND C. KING SIZE


ASSEMBLY INSTRUCTIONS

Component Check List

- 1 *Headboard
- 1 *Footboard
- 2 *Side Rail
- 4 *Bed Slat


Fitting Check List

- 12 *Wood Screws
- 8 *Washers
- 8 *Machine Screws
- 1 *Allen Key

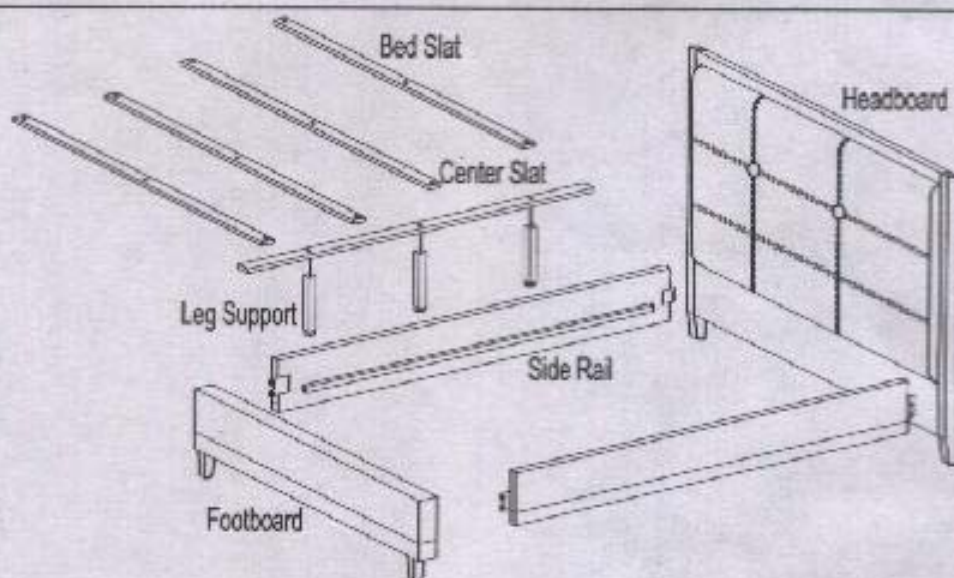


Step 1

Attach each side rail to headboard by hanging the hook bracket (installed) then fix each bracket using short wood screws. Repeat with Footboard.

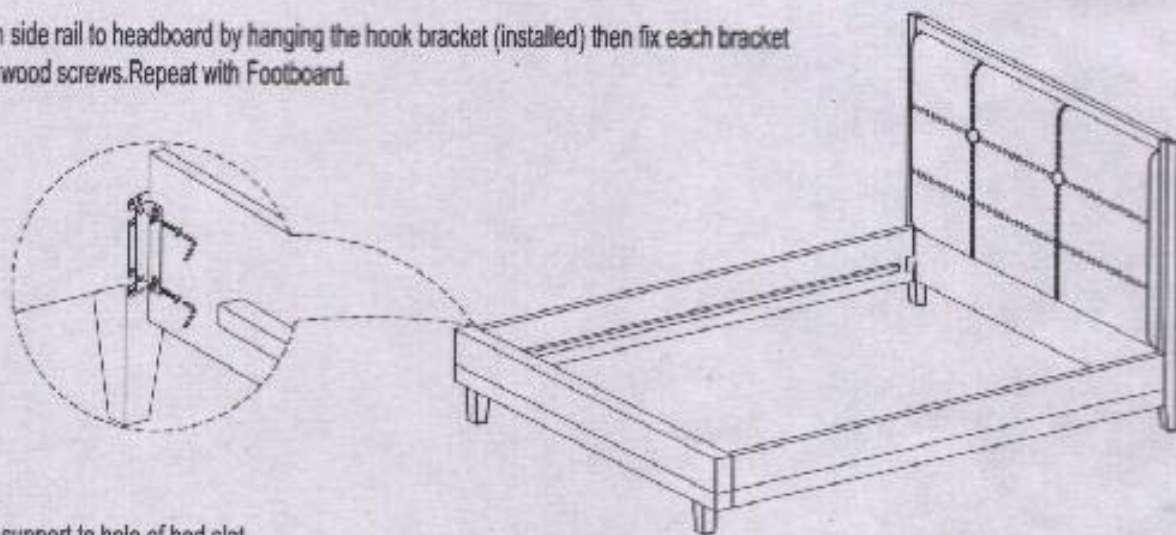

Step 2

Attach a leg support to hole of bed slat.

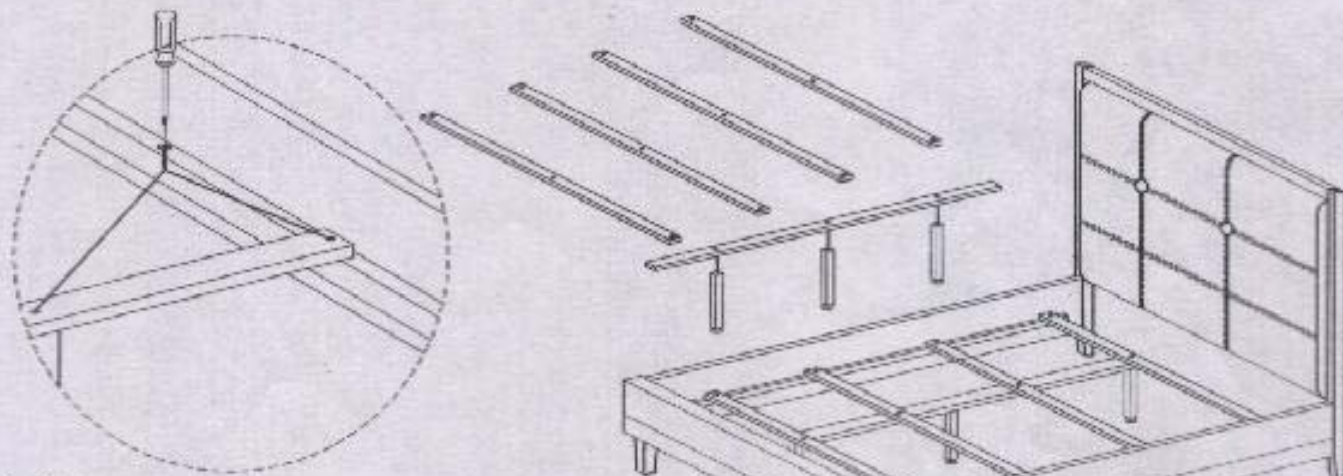

Step 3

Place all bed slats onto the bed assembly and fix using wood screws. Make sure each corner of bed slat has been fixed to bed assembly.